


Installation and user manual

Hygienic magnetic filter, SFH type

Permanent magnetic filter for fluids and powders in pressure pipes.

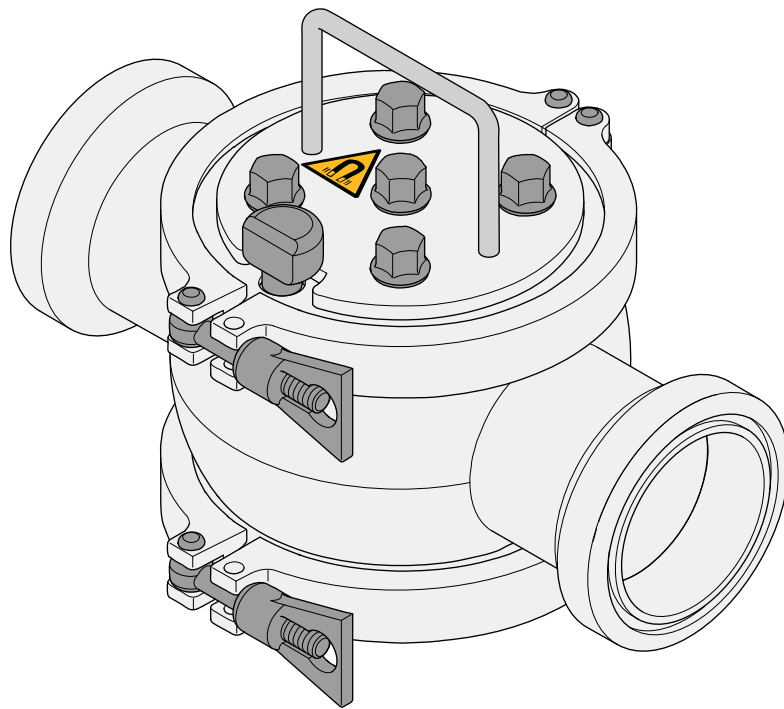

© Copyright. All rights reserved.

Table of contents

1 Introduction	4
2 Safety.....	5
2.1 Safety risks.....	5
2.2 General safety instructions.....	5
2.3 Damage due to magnetic field	5
2.4 Other remarks/warnings.....	5
3 Standards and regulations	6
3.1 Limit values for occupational and public exposure to permanent magnetic and electromagnetic fields.....	6
4 General information	7
4.1 Ferromagnetism	7
4.2 Warranty conditions	7
4.3 Other remarks/warnings.....	7
5 Specifications	8
5.1 Description of function.....	8
5.2 Range of application	8
5.3 Use in food product flows.....	8
5.4 Temperatures.....	8
5.5 Free space	8
6 Product information	9
6.1 Construction	9
6.2 Scope of delivery.....	10
6.3 Identification plate	10
7 Transport and installation	11
7.1 Transport.....	11
7.2 Installation	11
8 Operating principle	13
8.1 General	13
8.2 Cleaning process – disposal of ferromagnetic particles.....	13
9 Maintenance and inspection	15
9.1 General guidelines	15
9.2 Frequency of maintenance.....	16
9.3 Cleaning instructions.....	16
9.4 Flux density measurement of the magnetic bars	17
9.5 Replacing sealing rings	18
10 Troubleshooting	20
10.1 Troubleshooting table.....	20
11 Service, storage and disassembly.....	21
11.1 Customer service	21
11.2 Spare parts.....	21
11.3 Storage and disposal	21

1 Introduction

This manual contains information about correct use and maintenance of the device. The manual contains instructions that should be followed to prevent injury and serious damage and to ensure safe and problem-free operation of the device. Read this manual thoroughly and ensure that you fully understand everything before using the device.

If you need more information or still have questions, please contact Goudsmit Magnetic Systems B.V.. The contact details are provided on the title page of this manual. Additional copies of the manual can be ordered by providing the device description and/or article number as well as the order number.

In this manual, the SFH hygienic magnetic filter is further referred to as the 'device'.



NOTICE

Read this manual carefully before installation and commissioning!

The descriptions and figures in this manual, provided for explanatory purposes, may differ from the descriptions and figures of your version.



NOTICE

This manual and manufacturer's declaration(s) are to be considered part of the device. Both documents must remain with this device if it is sold.

The manual must be available to all operating personnel, service technicians and others who work with the device throughout the life of the device.

2 Safety

2.1 Safety risks

This chapter describes the safety risks of the device. Where necessary, warning pictograms have been affixed to the device. These pictograms are explained later in this document.



NOTICE

Observe the following measures:

- ▶ Read the warning pictograms on the device carefully.
- ▶ Check that the pictograms on the device are present and legible at regular intervals.
- ▶ Keep the pictograms clean.
- ▶ Replace pictograms that have become illegible or that have been removed with new pictograms in the same locations.

2.2 General safety instructions

- The instructions in this manual must be complied with. If they are not, there is a risk of material damage, personal injury and even a danger of death.
- The device may only be used for magnetic filtering of fine ferromagnetic contaminants – such as stainless steel wear particles – from fluid and powder flows in pressure pipes with a pressure of max. 10 bar. Any other use is inconsistent with the regulations. Any resulting damage is not covered by the factory warranty.
- Ensure that people who work on the device or in its immediate vicinity wear adequate protective equipment.
- Impose additional safety measures and use additional warning pictograms if the device remains easily accessible to people. If this is not possible, ensure that clear instructions are provided for the entire system in which this device is integrated.
- Work on the device may only be carried out by qualified personnel. Ideally, maintenance work on the magnets should be carried out by Goudsmit Magnetic Systems B.V. personnel.
- Always take locally applicable safety and environmental regulations into account.

2.3 Damage due to magnetic field

The magnets generate a powerful magnetic field that attracts ferromagnetic particles. This also applies to ferrous materials that may be carried on the person, including keys, coins and tools. When working within the magnetic field, use non-ferromagnetic tools and workbenches with a wooden worktop and non-ferromagnetic base.



WARNING

Strong magnetic field

There is a risk of personal injury when carrying out work and measurement checks on the device. Do not place the fingers or other body parts between the magnetic components.

2.4 Other remarks/warnings

Rectify all faults before operating the device. If the device is used whilst exhibiting a fault, after having completed a risk assessment, warn operating and maintenance personnel of the fault and the potential risks associated with that fault.


3 Standards and regulations

3.1 Limit values for occupational and public exposure to permanent magnetic and electromagnetic fields

The limit values and magnetic fields are defined in accordance with the EMC Directive 2013/35/EU as follows:

Directive 2013/35/EU of the European Parliament and of the Council of 26 June 2013 on the minimum health and safety requirements regarding the exposure of workers to the risks arising from physical agents (electromagnetic fields).

Observe the following measures in relation to exposure to magnetic fields in accordance with EN12198-1 (machine category = 0, no restrictions) of the device:

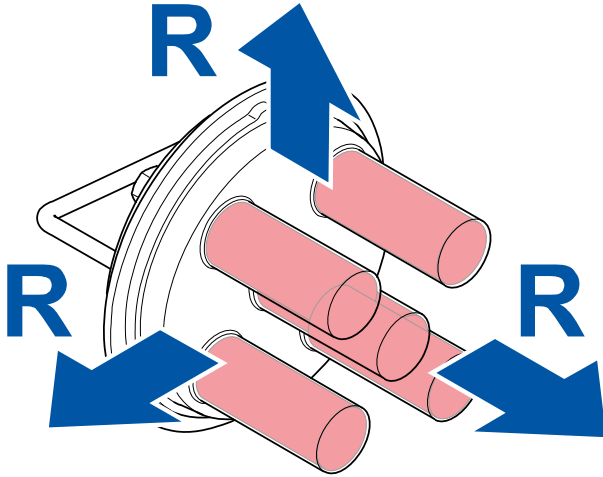

Life-threatening danger to people with implanted medical aids

People with an active implanted medical aid (e.g. pacemaker, defibrillator, insulin pump) may never be present within a radius 'R' of 0.5 metre(s) of the device.



Damage to products with sensitivity to magnets

Products that contain ferromagnetic parts, such as debit cards, credit or chip cards, keys and watches, may be rendered permanently damaged if they come within a radius 'R' of 0.2 metre(s) of the device.



Employees who are pregnant and the general public may not come within a radius 'R' of 0.05 metre(s) of the device.



WARNING

Projectile hazard

Ferromagnetic objects will be attracted if they come within a radius of 0.3 metre of the magnet.

Limit values for occupational exposure (general and for limbs) are not exceeded.

4 General information

4.1 Ferromagnetism

The device's principle of operation is based on ferromagnetism. Ferromagnetism is a property possessed by certain materials, such as iron, cobalt and nickel. These materials can become magnetized when exposed to an externally applied magnetic field. Materials that remain magnetized after the external magnetic field is removed are called permanent magnets or magnetically hard.

However, most magnetic materials lose their magnetism after the external magnetic field is removed. These are soft magnetic materials. Most alloys of iron, cobalt and nickel are magnetic.

However, some stainless steel alloys, such as AISI304 or AISI316, are only slightly magnetic.

4.2 Warranty conditions

The warranty on the device is void if:

- Service and maintenance are not performed in accordance with the operating instructions or are carried out by personnel not specially trained for this purpose. Goudsmit Magnetic Systems B.V. recommends having service and maintenance carried out by service technicians from Goudsmit Magnetic Systems B.V..
- Modifications to the device are carried out without our prior written consent.
- Parts of the device are replaced with non-OEM or non-identical parts.
- Parts of the device become damaged, because the device was put into production with a malfunction and/or a persistent malfunction.
- The device is used injudiciously, incorrectly, carelessly or in a manner not in keeping with its nature and/or intended use.



NOTICE

All parts subject to wear and tear are excluded from warranty.

4.3 Other remarks/warnings

- Do not use the device if it is damaged.
- Only use the device for the application for which it was designed.
- Ensure that the device is maintained correctly and in accordance with the instructions in this manual.
- Rectify all faults before operating the device.

5 Specifications

5.1 Description of function

The magnetic filter filters fine ferromagnetic contaminants of up to 30 µm – such as stainless steel wear particles – from fluid and powder flows. The product must not contain any ferromagnetic particles large or heavy enough to cause damage to the magnetic bars. Maximum particle size is 10-16 mm, depending on the type.

- If necessary, place a strainer before the product inlet of the device in your installation.

5.2 Range of application

This type of magnetic filter has been specially developed for the stringent hygiene requirements of the food-processing and pharmaceutical industries. In many cases, the products being transported are fluids or powders with a risk of bacterial growth.

The pressure drop depends on the physical properties of your product flow (viscosity) and its velocity. We can calculate the exact pressure drop for these filters in your situation for gaseous or liquid products using our FEM software. Contact us for additional assistance.

5.3 Use in food product flows

The device is supplied in stainless steel with a polished finish as standard. This is suitable for food contact applications, where there is a low risk of bacterial growth. All contact materials are compliant with EU directive EC1935/2004.

5.4 Temperatures

The devices are suitable for the following ambient and product temperatures:

Applied magnet quality	Ambient temperature	Max. product temperature
N-42SH	-20°C to +60°C	140°C
N-52SH	-20°C to +60°C	140°C


The magnetic material must be protected against higher temperatures than those specified on the data sheet as the magnet will permanently lose magnetic force if exposed to higher temperatures.

5.5 Free space

For installation, operation, and maintenance purposes, it is recommended to leave 0.5 metres of space around the device.

6 Product information

6.1 Construction

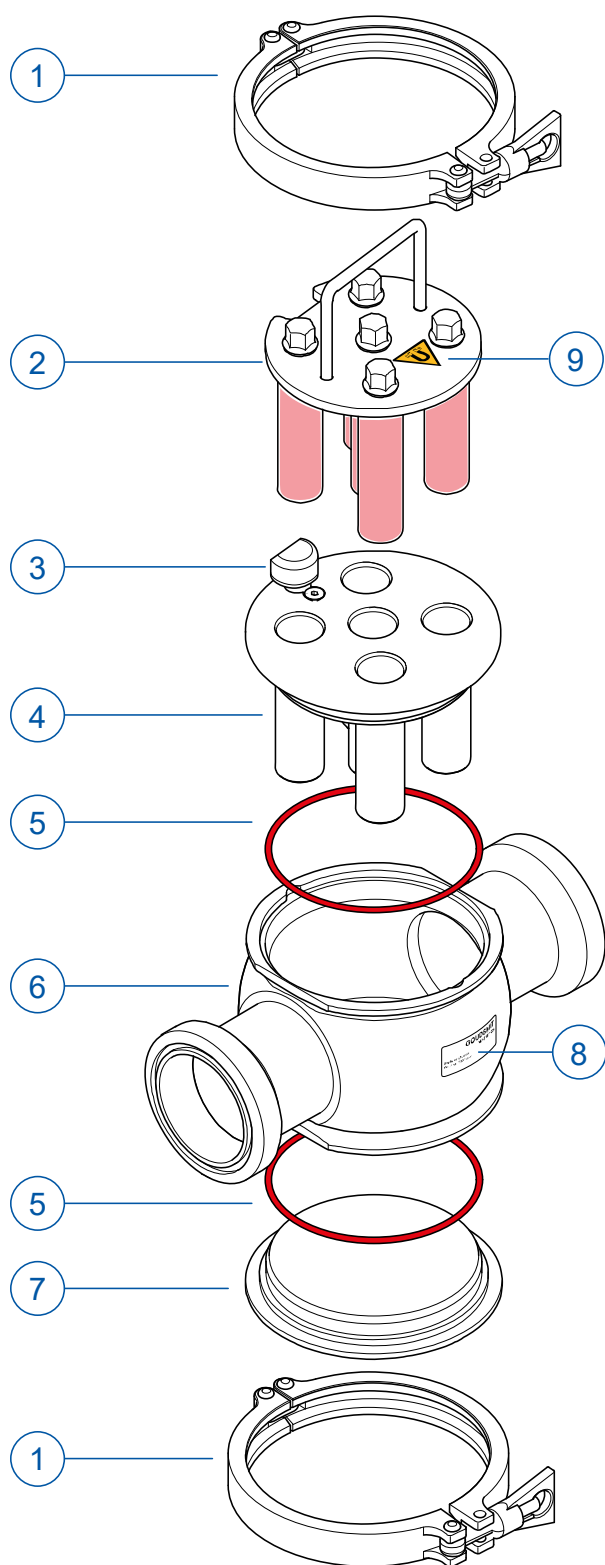

- [1] Clamp
- [2] Magnetic grid unit
- [3] Cleaning safety mechanism
- [4] Extractor element
- [5] Seal
- [6] Housing
- [7] Bottom plate
- [8] Identification plate
- [9] Warning pictogram

6.2 Scope of delivery

Check the shipment immediately upon delivery for:

- Possible damage and/or shortcomings as a consequence of transport. In the event of damage, ask the carrier for a transport damage report.
- Completeness.




NOTICE

In the event of damage or incorrect shipment, contact Goudsmit Magnetics immediately. The contact details are provided on the title page of this manual.

6.3 Identification plate

The following identification data are shown on the device. The identification data are very important for maintenance of the device.

Always keep the identification data clean and legible. Always provide the article and order numbers when ordering spare parts, requesting service or reporting a malfunction.

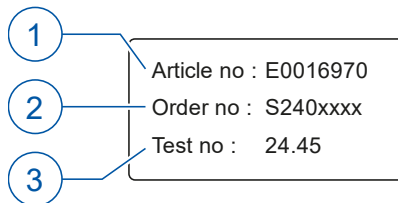

- [1] Article number
- [2] Order number
- [3] Pressure test number

7 Transport and installation

7.1 Transport



WARNING

Note

The device permanently emits a magnetic force.

Observe the safety instructions for transport in the Safety risks [► 5] section.

- During transport, avoid all impact in order to prevent damage, especially to the magnetic bars. In the event of damage to the tubes, the magnet packs may not move in the tubes, or only move with difficulty.

7.2 Installation



NOTICE

Take the following precautions:

- Work safely, provide ample work space and use dependable scaffolding, ladders and other tools so the device can be installed without any risks.
- The device permanently emits a magnetic force. See the Safety risks [► 5] section for the precautions that must be taken when working on the device.
- Only qualified personnel should work on the device.
- Ensure that there is sufficient clearance around the installation to install the device in the installation/structure and for operation, inspection and maintenance work to be carried out.
- Ensure that no external vibration is transferred to the device, as this can cause permanent loss of magnetic force.
- Only non-magnetic structural parts are permitted within the range of the magnetic field in order to prevent a negative impact on the removal of ferrous particles. In simple terms, the magnetic field may not be 'short circuited'.
- Only use lifting/hoisting tools that are in good condition, and do not exceed the lifting capacity of the tools.
- The supply and discharge channels and structure must be sufficiently strong to bear the weight of the device with the captured ferrous particles.




CAUTION

Risk of injury from edges and sharp corners

- Take extremely care when carrying out work near sharp edges and pointed corners.
- Wear protective gloves if you are unsure.

- Install the device free of mechanical stress and at the correct working height in your product channel for the operating personnel. Mechanical stress on the device can cause deformation and other problems.

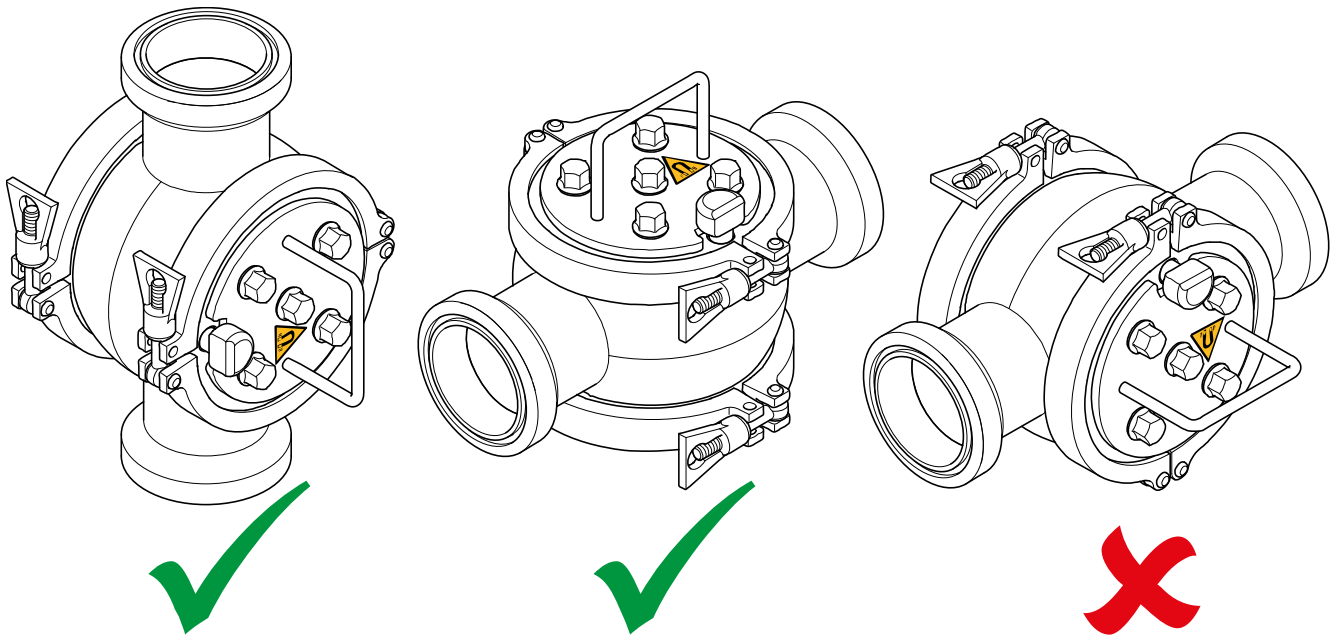

NEVER install the device with both connections and the magnet unit positioned horizontally, due to pipe drainage concerns.



NOTICE

Installing the device in a manner other than specified may result in damage and hazards. During a production stop, (hot) residue may remain in the housing, which can flow out when the device is opened.

- The devices are available with various standardized flanges and couplings. Follow the installation instructions in accordance with the relevant standards for the flanges and couplings to install the device in your installation. Misalignment or loose mounting can cause leakage.
- Clean the device thoroughly before commissioning.

8 Operating principle

8.1 General

The magnet unit with very strong neodymium magnetic bars is located in the centre of the product flow. The product contaminated with ferromagnetic particles passes several magnetic bars as it flows through the filter. The magnets attract passing ferromagnetic contaminants. The captured particles stick to the magnets, while the purified product flows on.

8.2 Cleaning process – disposal of ferromagnetic particles

When cleaning the device, wear the requisite protective clothing, such as overalls, gloves, goggles and safety shoes.



CAUTION

Risk of burns from hot surface

Contact with hot parts may cause burns.

- ▶ Always wear protective work clothing and safety gloves when carrying out work near hot components.
- ▶ Make sure all components have cooled down to ambient temperature before carrying out any work.
- ▶ If applicable, apply additional warning pictograms for hot surfaces to the installation and device.



WARNING

Caution


The product flow must be stopped when work is being carried out on the device.

Be careful when opening the device.

- ▶ Hot product may be released from the device when removing the magnet unit.
- ▶ There may be positive pressure in the pipes.

Cleaning process

Once the product flow is stopped, you remove the magnet unit from the product channel. Next, pull the magnetic grid unit out of the extractor element, causing the ferromagnetic particles to fall from the extractor tubes.

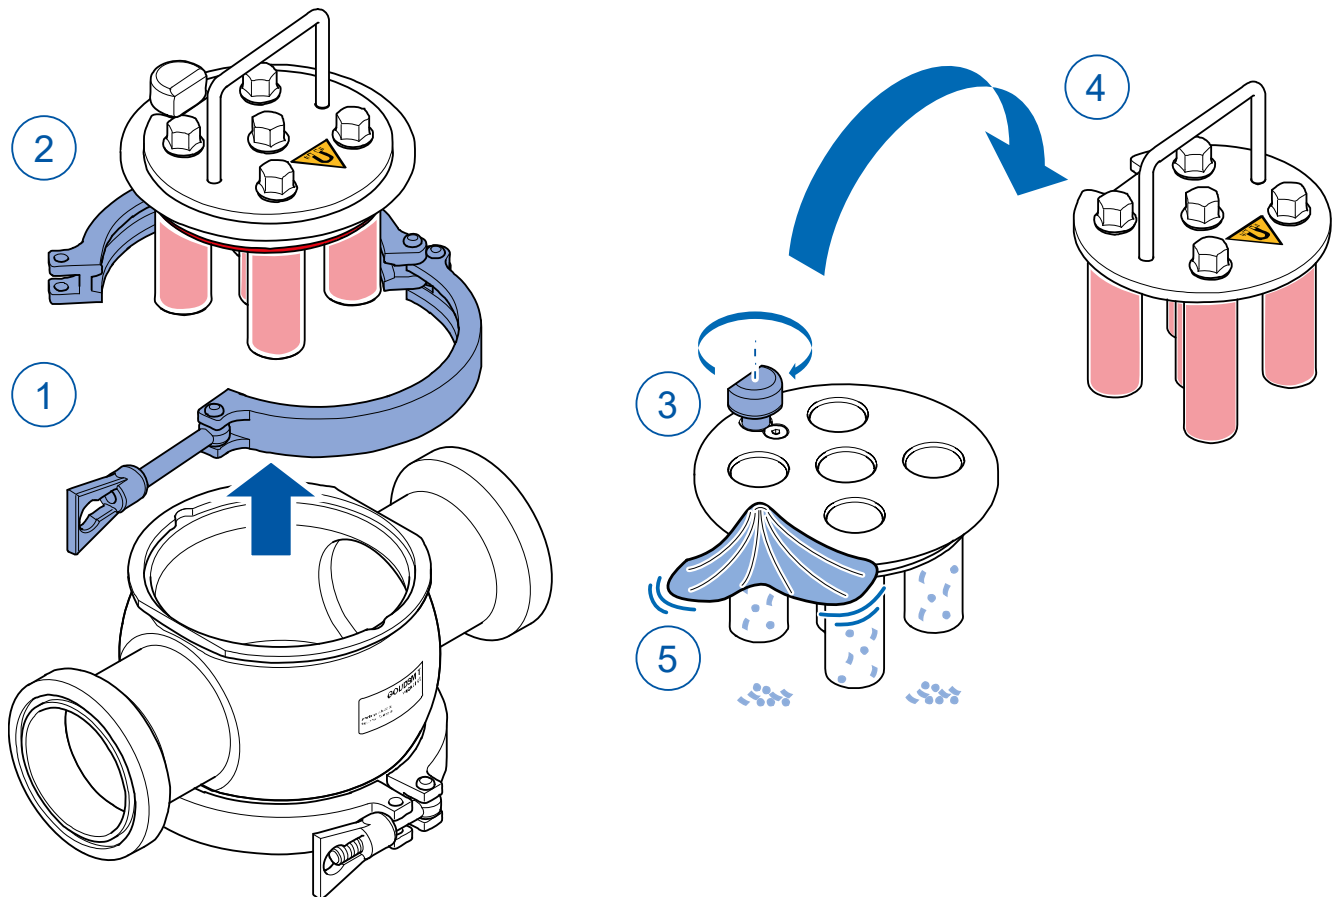

To clean, proceed as follows:

- Stop the product flow.
- Release the clamp and remove it [1].
- Remove the magnet unit [2] from the housing and place it on a clean, non-ferromagnetic surface (e.g. wood or plastic).
- Manually rotate the cleaning safety mechanism into the cleaning position [3].



NOTICE

DO NOT use tools to loosen a binding cleaning safety mechanism.

- Remove the magnetic grid unit [4] from the extractor element.
- Place the magnetic grid unit away from the extractor element on a clean, non-ferromagnetic surface.
- Collect the ferromagnetic particles that now fall from the extractor element and dispose of them.
- Clean all parts with a soft, clean cloth [5] and – if necessary – with a suitable cleaning agent.
- Slide the magnetic grid unit back into the extractor element and rotate the cleaning safety mechanism back into the locked position.
- Place the complete magnet unit [2] back in the housing.
- Refit the clamp and tighten the screw connection.
- Production can be safely resumed.

9 Maintenance and inspection

9.1 General guidelines



WARNING

Risk of crushing

In view of the large magnetic forces, replacing the internal magnet components is extremely dangerous as they are difficult to handle. Replacement may **ONLY** be carried out by appropriately qualified personnel or (ideally) by Goudsmit Magnetics technicians.

If the replacement is carried out by unqualified personnel, the warranty will be void.

Goudsmit Magnetics cannot be held liable for any consequential damage to people and/or materials if this prohibition is ignored.



CAUTION

- ▶ The product flow must be stopped when work is being carried out on the device.
- ▶ Be careful with tools and ferrous objects. The magnetic force is permanently present.

Magnetic systems do not only attract ferromagnetic particles, but a small proportion of your product will also continue to 'adhere' to the magnets. Remove all captured particles from the magnets at regular intervals. A clean magnet is considerably more effective.

- Always inform operating personnel of scheduled inspections, maintenance, repairs and in the event of faults.
- Check regularly that all warning pictograms are still present in the correct locations on the device. If the warning pictograms are lost or no longer legible, replace them with new pictograms in the original locations immediately.
- Ensure that the device is externally clean. Remove dust, dirt and particles from the device as appropriate.

9.2 Frequency of maintenance

Action	Daily	Monthly	6 months
Clean the magnetic bar tubes (for optimal performance) (► Cleaning process – disposal of ferromagnetic particles [► 13]).	min. 2x ¹⁾		
Check sealing ring for wear and presence.	•		
Measure magnetic bars for flux density (► Flux density measurement of the magnetic bars [► 17]).		•	
Check tubes of extractor element and magnetic grid unit for wear.		•	
Replace sealing rings (► Replacing sealing rings [► 18]).			•

¹⁾ The frequency of the cleaning process depends on the capacity of your product flow and the level of soiling.



NOTICE

Goudsmit Magnetics offers an annual maintenance inspection, including replacement of the seal(s) and an inspection report with certificate for the magnets.

9.3 Cleaning instructions

Wet or dry cleaning

If the use of fluids is prohibited in your installation, use disinfectant cloths that are suitable for contact with the processed product, if necessary.

The frequency of cleaning is dependent on the degree of cleanliness required for the processed product. The frequency of cleaning must be increased in applications where sensitive food products are processed. Perform a hygiene risk assessment to determine the requirements in your situation.

When used in food product flows

Cleaning and disinfectant methods and agents that are used for cleaning must be adapted to the specific type of soiling (carbohydrates, proteins, fats, etc.) and the degree of cleaning required for your application. The type of product that is processed thus determines to a large extent which combination of cleaning agents is suitable. Consult your cleaning agent supplier to select the correct cleaning agents for your specific situation.


Check with your cleaning agent supplier whether the products are suitable for the material of the chosen seals (silicone, NBR or Viton).

The device is made of stainless steel or 'food-grade stainless steel' 1.4404/SAE 316L.

9.4 Flux density measurement of the magnetic bars

The magnetic bars must be measured at periodic intervals to check their magnetic flux density and to determine whether the magnetic force has reduced. Use a suitable gauss meter/tesla meter to measure the poles of the magnetic bar on the surface (the unit is tesla, gauss, kA/m or oersted).

Goudsmit Magnetics can perform magnet measurements on location, if desired. Proceed as follows:

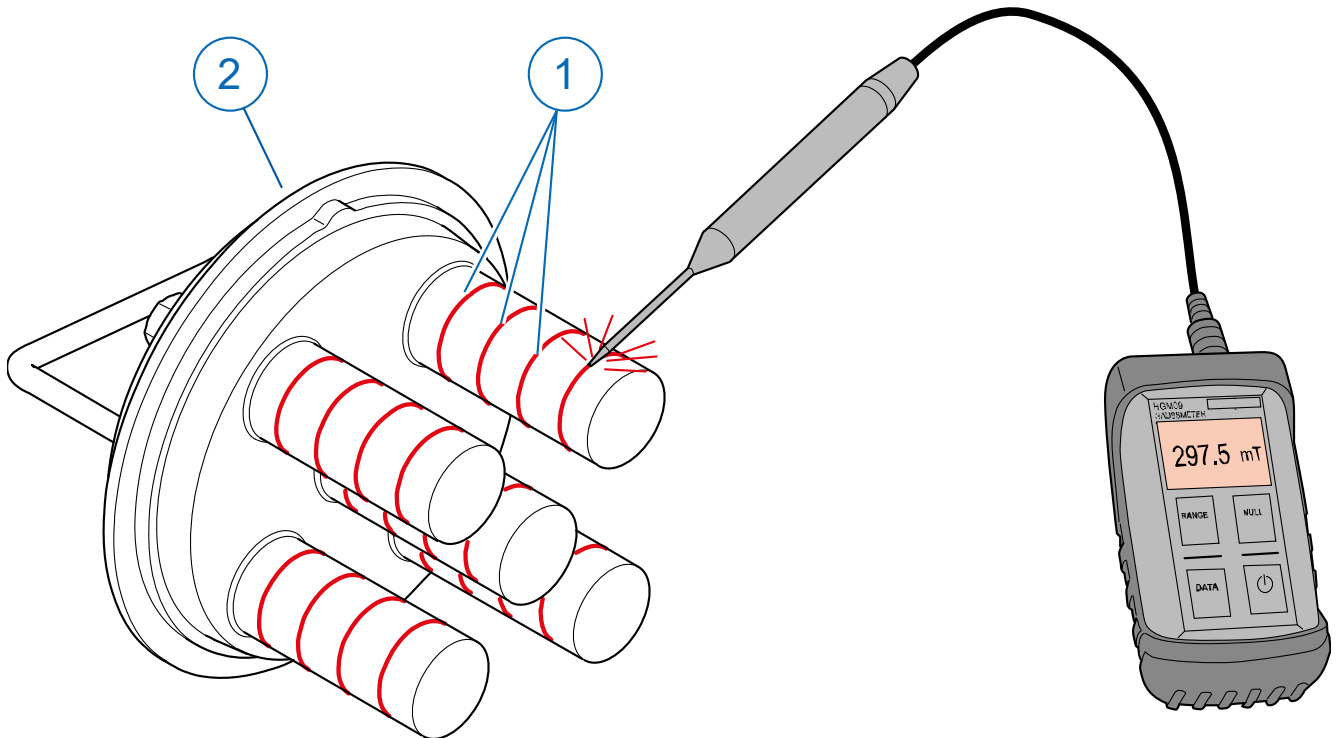

- Stop the product flow.
- Release the clamp and remove it.
- Remove the magnet unit from the housing and place it on a non-ferromagnetic surface (e.g. wood or plastic).
- Manually rotate the cleaning safety mechanism into the cleaning position. Remove the magnetic grid unit [2] from the extractor element and place it on a clean, non-ferromagnetic surface.
- Move the gauss meter/tesla meter probe [1] along the poles on the magnetic bar.


The measured values may fluctuate for various reasons, such as the position (angle) of the probe on the magnetic bar tube, the thickness of the probe and the reproducibility of the measurement. The temperature of the magnetic bar tube may be higher than 20-22°C due to the influence of the product flow.

- Record the highest measured value.
- Using the accompanying data sheet, check whether the measured value falls within the permitted range for the peak value. **Note:** The measured values on the data sheet are values measured at a measurement temperature of 20°C ± 2°C.
- Slide the magnetic grid unit back into the extractor element and rotate the cleaning safety mechanism back into the locked position.
- Place the magnet unit back in the housing.
- Refit the clamp and tighten the screw connection.
- Production can now be safely resumed.

9.5 Replacing sealing rings

We recommend replacing the sealing rings at least every six months or more frequently, depending on the level of wear.

To replace the sealing ring, proceed as follows:

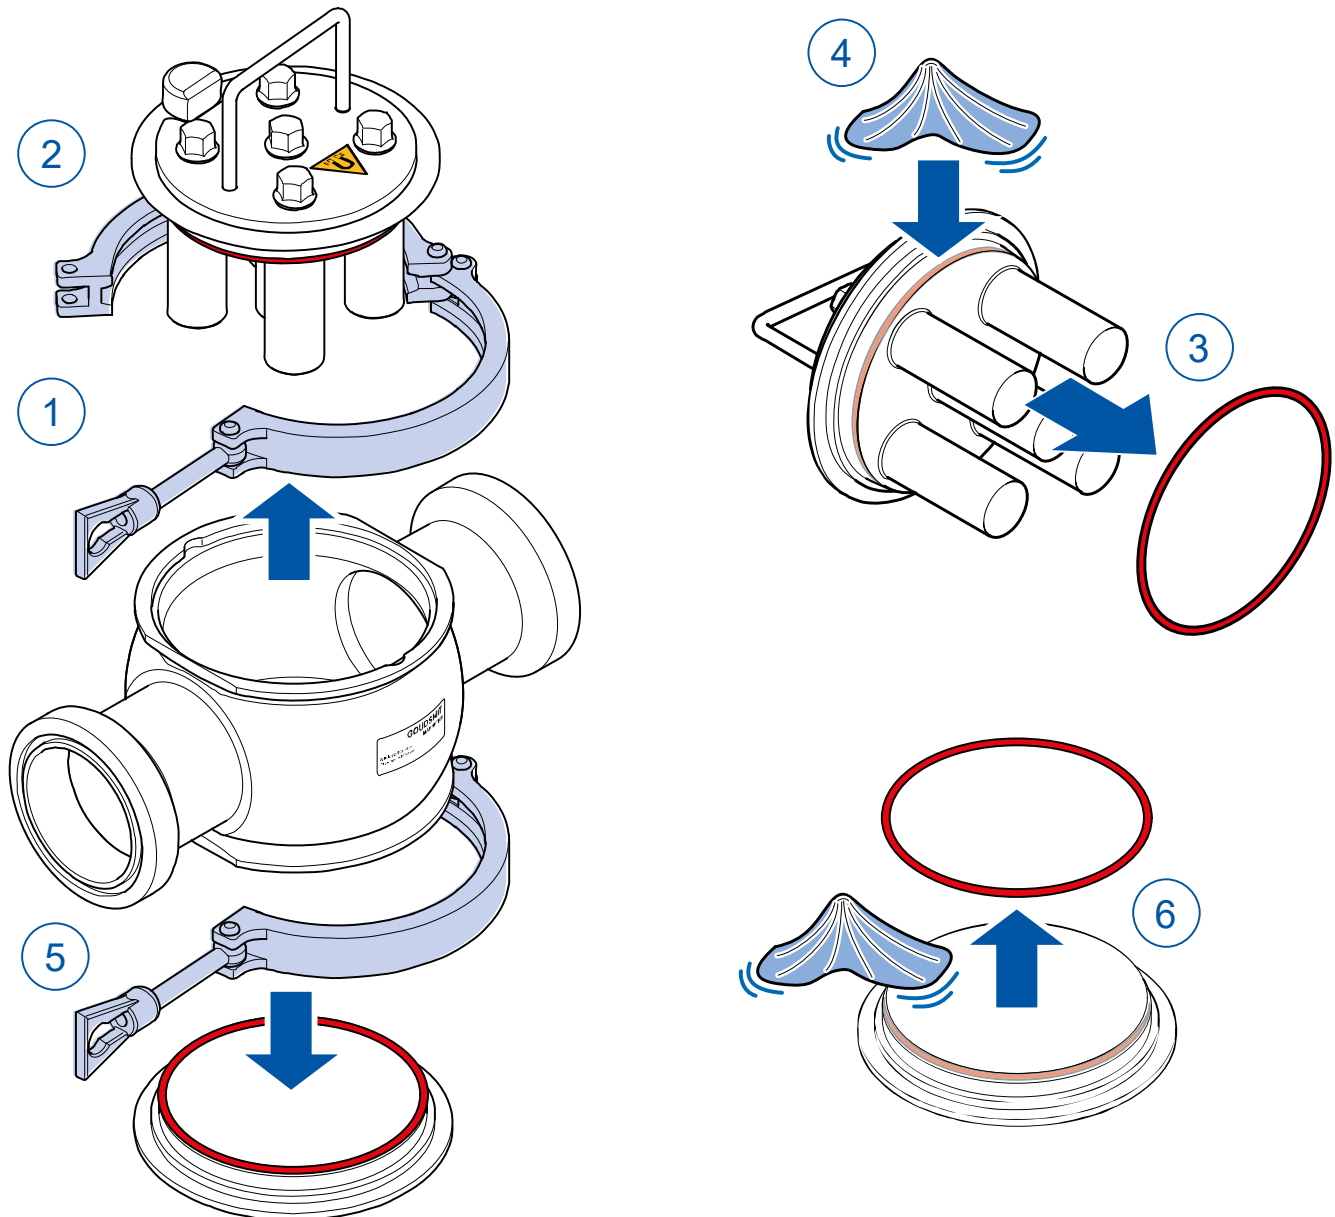

- Stop the product flow.
- Release the clamp [1] from the magnet unit [2] and remove it.
- Remove the magnet unit from the housing and place it on a non-ferromagnetic surface (e.g. wood or plastic).
- Carry out a cleaning process (► Cleaning process – disposal of ferromagnetic particles [► 13]).
- Remove the old sealing ring [3].
- Thoroughly clean the groove in which the sealing ring was seated, [4] and fit a new sealing ring.
- Release the clamp from the bottom plate [5].
- Remove the old sealing ring [6].
- Thoroughly clean the groove in which the sealing ring was seated, and fit a new sealing ring.
- Reassemble everything in reverse order.

- Place the magnet unit back in the housing.
- Refit the clamp and tighten the screw connection.
- Production can now be safely resumed.

If the sealing rings wear out too quickly, e.g. due to too high a temperature or too abrasive a product, enquire about alternative compounds.

10 Troubleshooting

10.1 Troubleshooting table

Use the following table to search for faults, determine the possible cause and find the remedy. In the event of a fault that is not in the table, contact Goudsmit Magnetics customer service.

Problem	Possible cause	Solution
The device does not separate ferromagnetic particles completely or at all.	The magnetic bar is overloaded with ferromagnetic particles.	<ul style="list-style-type: none"> Remove the captured particles from the magnetic bar (more frequently). Use a permanent magnet to check whether the separated particles are ferromagnetic.
	Particles that are not attracted are not sufficiently ferromagnetic.	<ul style="list-style-type: none"> Check the magnetic behaviour of the installed parts around the magnets by holding a ferrous object close to the magnets. If there are parts that react to the magnet, replace them with non-magnetic parts, such as those made from stainless steel.
Leakage of product material.	Sealing ring is not seated properly in the groove.	<ul style="list-style-type: none"> Fit the sealing ring in the groove properly.
	Sealing ring is worn.	<ul style="list-style-type: none"> Replace the sealing ring.
	Clamp connections not tightened sufficiently.	<ul style="list-style-type: none"> Tighten the clamp connections.
Magnetic grid unit binds in extractor element.	Dents in the extractor tubes.	<ul style="list-style-type: none"> Remove the dents from the extractor tubes. Contact Goudsmit Magnetics.

11 Service, storage and disassembly

11.1 Customer service

Have the following information to hand when contacting customer service:

- Data from the identification plate.
- Type and scope of the problem.
- Presumed cause.

11.2 Spare parts

- When ordering, state the article and order numbers that appear on the identification plate.
- For further information, please contact us by +31 (040) 22 13 283 or consult our website.

Spare parts are usually parts that are subject to wear. These include:

- sealing ring (various types available)

It is recommended to replace the sealing ring every six months.

- Magnetic bars

- Extractor element

How quickly the sealing rings wear will depend on your product and how abrasive it is, as well as the capacity of your product flow. Several types of sealing rings are available for this device. See the data sheet for the precise specifications. Please get in touch with us for information on the availability of the sealing rings.

11.3 Storage and disposal

Storage

If you do not intend to use the magnet product for an extended period of time, we recommend placing the device in a dry, safe place, and applying preservative to the vulnerable parts, if necessary.

Disposal/recycling

When dismantling and/or scrapping the magnet product, keep in mind the materials from which the individual parts are made (magnets, iron, aluminium, stainless steel, etc.). This should ideally be done by a specialized company. Always observe the local regulations and standards pertaining to industrial waste disposal.

Inform those disposing of the magnet material of the hazards of magnetism. To this end, see also the Safety risks [► 5] section.



